## CONFIGURATION WITH NEW CONFIGURATION SOFTWARE

ΛBL

REMOVE RFID IN USER LIST

| 1 | Click the [Individual Configuration] button                                   |
|---|---|
| 2 | Switch on charging station  |
| 3 | Wait 15 seconds   |
| 4 | Press [Scan] button   |
| 5 | Press [Show currently stored User List] button                                |
| 6 | UID numbers of RFID cards that are already stored in the User List, are shown |
| 7 | Mark UID number with mouse  |
| 8 | Back-space or delete key  |
| 9 | Press [Save as new User List] button  |