

## Integration Manual 2.2

ABL.R&D.Software.SBC

Revision: 1.0

Date: 07.01.2025

# Table of Contents

<b>1</b>	<b>Features</b>	<b>5</b>
1.1	Installation and Configuration	5
1.2	Supported Setups	5
1.3	Supported Peripheral Devices Integrated in ABL Charging Stations	5
<b>2</b>	<b>General Behavior</b>	<b>6</b>
2.1	Start Charging	6
2.2	Stop Charging	6
2.3	Restart Behaviour	7
2.4	Reset Behaviour	8
<b>3</b>	<b>Eichrecht</b>	<b>10</b>
<b>4</b>	<b>OCPP Interface</b>	<b>12</b>
4.1	Local SOAP Endpoint	12
4.2	Supported Profiles	12
4.3	Functions	13
4.4	Configurations	15
4.4.1	Standard Keys OCPP 1.5	15
4.4.2	Standard Keys OCPP 1.6	16
4.4.3	ABL Proprietary Keys	20
4.5	Error Codes	23
4.6	WebSocket-Secure Connectivity	30
4.7	Upload Diagnostics	30
4.8	Proprietary use of OCPP DataTransfer	32
4.8.1	Initiated by Central System	32
4.8.1.1	Rejected status messages	34
4.8.2	Initiated by Charge Point	35
<b>5</b>	<b>External Setting of Current Limits</b>	<b>37</b>
5.1	OCPP Smart Charging	37
5.2	Standard Properties of all Virtual Dynamic Limits	37
5.3	Limit Control via OCPP Data Transfer	38
5.3.1	Get Virtual Device Limit	38

---

5.3.2	Set Virtual Device Limit.....	38
5.3.3	Get/Set Outlet Limit.....	39
5.3.4	General Notes on Setting Limits.....	39

### Document Description

<b>Scope</b>	Integration of ABL charging stations to backend systems
<b>Purpose</b>	The Charge Point software comes with the ABL Single Board Computer (SBC) installed on ABL charging stations (also referred to as "charge point" in OCPP). This document describes its feature set, lists the supported products and elaborates on the OCPP interface. It is intended to guide backend ("central system" in OCPP) operators that wish to integrate ABL charging product with their software.
<b>References</b>	<ul style="list-style-type: none"> <li>• Technical Setup Manual</li> <li>• OCPP 1.5 12-06-08: Open Charge Point Protocol – Interface description between Charge Point and Central System</li> <li>• OCPP 1.6 Edition 2, 2017-09-28: Open Charge Point Protocol – Interface description between Charge Point and Central System</li> <li>• IEC 61851-1 Ed 2.0:2010: Electrical vehicle conductive charging system – Part1: General requirements</li> <li>• DIN EN 61851-1:2012-01: Konduktive Ladesysteme für Elektrofahrzeuge; Teil 1: Allgemeine Anforderungen</li> <li>• IEC 61851-1 Ed 3 69/219/CD: Electrical vehicle conductive charging system – Part1: General requirements</li> </ul>
<b>Distribution</b>	<ul style="list-style-type: none"> <li>• This document is distributed with every release that causes changes in this document. Patch releases usually do not cause an update of this document.</li> <li>• Customers</li> <li>• Service</li> </ul>

### Document Change History

Date	Revision	Description of change	Author
29.11.2024	0.1	Initial Version for SW 2.2, takeover from SW 2.2	Iris Wintergerst
16.12.2024	0.2	adaptions of RFID handling	Robert Weikert
07.01.2025	1.0	Version for SW 2.2	Iris Wintergerst

# 1 Features

## 1.1 Installation and Configuration

The Charge Point software running on the SBC implements a smart charging controller compatible with OCPP. For initial setup, a web administration interface can be used to configure basic parameters required for obtaining connectivity to the backend via OCPP. Also the product setup is performed using the web administration interface. Once connection to the backend has been established, further configuration is done through OCPP.

## 1.2 Supported Setups

Setups controlled by the Charge Point software can have the following key features:

- Single or twin charger
- Group installations for up to 30 charge points
- Balancing of load between all charge points within the installation
- Optional metering
- Administrative web interface which can be used for setup, maintenance, and diagnosis
- Local and remote start/stop of charging
- Full support for local cache and white-list
  - A single complete update (i.e. loading a new list) may contain up to 9000 entries.
  - A single update of the list (i.e. a modification of an existing list on the charge point) may contain up to 700 entries.
- Detailed status reporting (error codes, diagnostics)
- Software update over the air (using OCPP)
- Diagnostics download over the air (OCPP)
- Basic support for OCPP Smart Charging
- Resuming of running transactions after a power failure or other outage (see [Restart Behaviour](#)(see page 7))
- Generating metering signatures using OCMF. This is relevant for fulfilling the German Law on Units and Measurements (Eichrecht).
- External power meter as additional input to load balancing

## 1.3 Supported Peripheral Devices Integrated in ABL Charging Stations

- Optional Meter: Energy Meter (ABL)
- USB-LTE-Dongle: MS2372h-153, MS2372h-158 (Huawei)
- USB-LTE-Dongle: IK41VE (Alcatel)

## 2 General Behavior

### 2.1 Start Charging

In general, the electric vehicle (EV) has to be connected to the charging point (CP) before the charging can be started. The behaviour is depending on the `ConnectionTimeOut` parameter.

Details regarding remote starting of charging transaction is configured using the `ConnectionTimeOut`, `LateOccupied` OCPP configuration keys.

In case `ConnectionTimeOut` is zero, a user must first connect their EV and then initiate the charging transaction, e.g. by presenting their RFID UID or remotely via a mobile phone app.

In case `ConnectionTimeOut` greater than zero, with remote starting or presenting the RFID UID the sequence of first plugging and then authenticating can be inversed (using `ConnectionTimeOut`).

`LateOccupied` delays the signalisation of the occupied state towards the backend.

There are features to automatically start charging after the user plugs the EV without swiping a RFID card or performing a remote start. These are controlled by `FreeCharging`, `FreeChargingOffline` configuration keys. Furthermore, after a black-out charging can be started automatically for newly plugged EVs using the `HandleNewTransaction` configuration.

Some ABL CPs provide two connectors for two EVs to charge at the same time (twin chargers) but only one RFID reader. To ensure that the mapping from EV to RFID UID is correct (and the right customer gets billed the right amount), charging is only initiated for the last connected EV within 10 minutes if the EV is *ready for charging but not yet charging*. In practice, that means the following:

- If no EV is connected, any UID is rejected.
- If one or more EVs are ready to charge, the last connected EV will be authorized by UID and processed further by backend (the CP sends a `StartTransaction.req`) or by local caches. All other EVs will lose their readiness and have to be reconnected to regain readiness.
- If a ready EV is not authorized by UID within 10 minutes it loses its readiness to charge. Any UID will now be rejected. To regain its readiness the EV has to be reconnected.
- On a CP with two connectors the same RFID card cannot start two charging sessions on the same CP. Only one is possible. If the same card is presented again an already started session will be terminated and then the charging can start on the other connector.

During charging, the CS connector (connected to the EV) is locked. This is to ensure that the charging cable is not accidentally removed during charging. Locking with ABL stations, by default, occurs early, that is, immediately after plugging the EV. To delay it to the time after swiping/remote start/auto start, the configuration `LockEarly` may be modified.

The meter value for the start of the transaction is read before the EV is allowed to reach charging state (B2/C2). According as proposed in the OCPP specification the energy register value is read from the meter to report the start value. If no meter value can be acquired, the value -1 will be sent as `meterStart` value, which is an integer field.

### 2.2 Stop Charging

ABL chargers are stopped by unplugging the cable from the EV. There is no need to present an UID token to stop charging. Unplugging the cable from the EV in turn also unlocks the cable from the CP.

Nevertheless the charging can be stopped before unplugging by presenting the same RFID UID with which the charging was started. In case the ID is assigned to a group ID also a card of the same group can stop the charging. This only works when the charging is started by the authentication response from the backend. In the local list no group ID is stored. The RFID is only considered after at least 30 seconds have passed after the start of the charging

session. This is to avoid that a charging session is stopped unintentionally by swiping the card again if for example the start of the session takes some time.

The backend may also stop the charging process, remotely. After a remote stop, the connector remains locked to prevent unintentional removal of the cable from the CP. With the charging stopped and the cable still locked, two next steps are possible:

- The OCPP backend can send a remote start to resume charging (and start a new transaction).
- The user can unplug the cable from the EV. This will release the cable from the CS.

An unintentionally locked socket can also be released using OCPP (*UnlockConnector*). In some product setups, the connector can only be released for 30 seconds. If the charging cable is not removed within this time limit, the socket locks again and will need to be unlocked again.

The meter value for the end of the transaction is read as soon as the EV is no longer in state B2 or C2. Again, the energy register value is used. If no meter value can be acquired, '-1' will be sent as meterStop value.

## 2.3 Restart Behaviour


A CP installation might go down while one or more EVs are connected and charging, e.g. because of a temporary power outage. Once the CP is available again, charging transaction may be resumed, automatically. To do so, the Charge Point software continuously saves information about its state and the current time in non-volatile memory.

Four configuration properties control the exact behaviour of the CP when resuming from a black out: *PowerTimeout*, *HandleNewTransaction*, *HandleOldTransaction*, and *HandleExpiredTransaction*. While the value for *PowerTimeout* is a duration of seconds, the other keys may be set to one of the following values: *Cancellation*, *ReenableUnknown* or *ReenableOld*.

If an EV started charging before an outage and the black out lasted longer than the *PowerTimeout* setting, then the transaction is considered as an **expired transaction**. Otherwise, if the the black out was shorter than the *PowerTimeout*, the transaction is marked as **old transaction**. If the *PowerTimeout* is set to zero, all transactions are considered as **old transactions**.

For EVs plugged during the outage there cannot be information saved before the black out. These are considered as **new transactions**. Any EV plugged after the system has completely booted are operated as normal and not considered by the restart behaviour.

The following diagram shows how the *PowerTimeout* distinguishes short from long black outs and how the charge starts of the EVs are decided to be expired, old, or new:

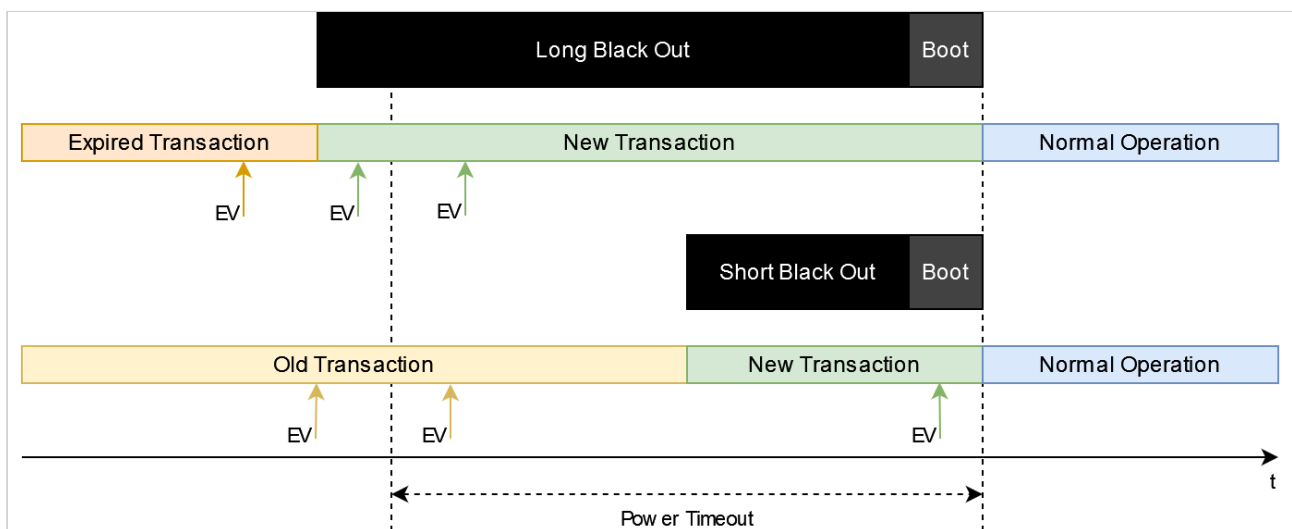

Configuration	Applied if...	Cancellation	ReenableUnknown	ReenableOld
HandleNewTransaction	EV was plugged during the outage	No session is started for the EV.	A free charging session is started for this EV.	Not accessible.
HandleOldTransaction	EV was plugged before outage and PowerTimeout=0, or outage was shorter than defined by PowerTimeout	The old session is not continued.	The charging of the EV will be restarted but in a new free charging session.	The old session will be continued after reboot.
HandleExpiredTransaction	EV was plugged before outage and the outage was longer than defined by PowerTimeout. (Only applicable if PowerTimeout > 0.)	The expired session is not continued.	The charging of the EV will be restarted but in a new free charging session.	The expired session will be continued after reboot.

ReenableOld is not applicable for HandleNewTransaction. Setting ReenableOld for HandleNewTransaction will always be rejected. Furthermore, if signatures on meter values are generated, ReenableOld is completely disabled. Setting it will be rejected.

When an EV is plugged in while the power of the station is switched on, the charging station might start the charging process immediately without authorization for a short time. This happens with old firmwares of the EVCC. As soon as the SBC has booted completely, the restart behavior is applied by the Charge Point software as described above.

The cache of pending transactions can be cleared remotely using OCPP with the *DataTransfer* request *DeleteTransactionCache*.

## 2.4 Reset Behaviour

A reset of the charge point can be triggered via the following methods causing differentiated behaviours as follows:



<b>Reset Initiator</b>	<b>Behaviour</b>
Backend	<p>If a reset is triggered through the backend with the <i>Reset</i> request, the charge point will try to finish the active transactions before rebooting. This includes sending one or more <i>StopTransaction</i> requests to the backend before performing the restart. If the <i>StopTransaction</i> requests can not be sent, the system will restart after a maximum timeout which is adapted to the number of active charging sessions. This ensures that the charge point is able to perform the reset in any case. After the reset, new charging sessions for connected EVs will not be started. So the configuration of the Restart Behaviour doesn't have an effect.</p> <p>A <i>Soft Reset</i> will only restart the main software-components of the charge point. A <i>Hard Reset</i> will trigger the SBC to perform a complete system-reboot. Log files will be conserved over reboots.</p>
Web Administration Interface	<p>If one triggers the reset via the Web administration interface (see Technical-Setup-Manual for details), ongoing transactions won't be stopped. After the reset the charge point will continue charging sessions which were active before, no matter which Reset Behaviour is configured. For the type of the reset, the above mentioned conditions apply.</p> <p>Log files will be conserved over reboots.</p>
Power Loss	<p>If the reset of the charge point is triggered by switching the power off and on again, the configuration of the Restart Behaviour will apply.</p> <p>While already conserved older log files will not be lost, the most recent log files will get lost by power outages.</p>

### 3 Eichrecht

The following information depicts the fulfillment of requirements for the German Law on Units and Measurements called "Eichrecht". This functionality is only available on ABL "Plus" products.

Products conformant to Eichrecht implement special means to prevent manipulation of meter values. For this purpose, ABL products allow meter values to be requested in a way so that they cannot be manipulated. The meter values are protected by cryptographic signatures. These will comprise the total energy values (measurand: Energy.Import.Active.Register) and are transmitted as an additional information to the backend. The contained information is compliant to the Open Charge Metering Format (OCMF). Such OCMF data sets can be verified with the "Transparenz-Software" available freely from the "SAFE" association. For more informations about this, see <https://www.safe-ev.de/de/>.

To embed OCMF in OCPP, each MeterValue consists of the SampledValues for the original measurands (OCPP ValueFormat "Raw") and an additional SampledValue carrying signature in the form of a string of hexadecimal encoded data (OCPP ValueFormat "SignedData"). The encoded data itself consists of an OCMF data set which carries transaction related information and a signature over this information. The used format is OCMF in version 1.0. Currently, only the textual representation of this format is generated.

Note: OCMF is a record based modular format. Thus, either multiple data sets for the beginning and the end of a transaction or a single charge data record (CDR) can be generated. By embedding both the OCMF data sets for begin and end into a single XML based input format for the "Transparenz-Software" the whole data of a transaction can be processed with the "Transparenz-Software" at once which then also performs difference-calculation. Analogously, a public key can be supplied, as well. These tasks have to be performed by a component in the backend.

At the beginning of a transaction the charge point will send an additional MeterValue request immediately after the StartTransaction request.

The following example depicts how a data set looks like for OCPP 1.6-J in a MeterValues request:

```
1  {
2      "connectorId":1,
3      "transactionId":2007,
4      "meterValue":
5      [
6          {
7              "timestamp":"2019-07-04T08:30:08Z",
8              "sampledValue":
9              [
10                 {
11                     "value":"268.978",
12                     "context":"Transaction.Begin",
13                     "format":"Raw",
14                     "measurand":"Energy.Active.Import.Register",
15                     "location":"Outlet",
16                     "unit":"kWh"
17                 },
18                 {
19                     "value":"HEXADECIMAL_STRING_WITH_ENCODED_DATA",
20                     "context":"Transaction.Begin",
21                     "format":"SignedData"
22                 }
23             ]
24         }
25     ]
```

26 }

The OCMF record will be embedded into the OCPP sampled value as a hexadecimal string. Two digits of this string reflect one octet of OCMF data. This encoding is dictated by OCPP.

The hexadecimal string will be added to every MeterValues-Request. For the MeterValues in the StopTransaction request, one can choose between two signature formats, defined by the configuration key "EndSignatureType". The format type "SIGNATURE\_TRANSACTION" will only send the data set for the last meterValue. The format type "SIGNATURE\_CDR" will send a charge data record containing the begin and end MeterValues (see also [Configurations](#)(see page 15)).

In the relevant products the configuration key *TransmitMeterSignature* is true by default, which enables the acquisition of meter values. If the CPO sets it to false, no Eichrecht conformant billing of the customers for the consumed energy will be possible. Also, the default Restart Behaviour for charging sessions is set to Cancellation for all situations. Before changing these configurations, check compliance with the Eichrecht for the respective use case.

If the communication with one of the signature relevant hardware devices (i.e. the meters or the logging gateway) breaks, the charge point will be disabled. Ongoing transactions will be suspended, immediately. After recovery the power delivery will resume. This ensures, that no energy can be drawn without valid signing of the corresponding meter value. Related error messages are generated during abnormal conditions.

The logging gateway cares for saving signatures and relevant events into a database. The usage of the database is checked regularly, every 24 hours. If the usage reaches a level of 95%, new charging sessions will be prevented. The outlets will be set to unavailable with an appropriate error message (see [Error Codes](#)(see page 23)).

## 4 OCPP Interface

The ABL charging stations provide a variety of OCPP versions and dialects.

Supported OCPP versions:

- OCPP 1.5
- OCPP 1.6

One of the supported transport layers can be selected by the protocol identifier of the backend URL:

Transport Layer	Protocol	TLS Encryption
SOAP/HTTP	http://	no
Websocket/JSON	ws://	no
Websocket-Secure/JSON	wss://	yes

Supported TLS versions:

- TLS 1.2
- TLS 1.3

### 4.1 Local SOAP Endpoint

When used with SOAP bidirectional communication has to be possible. That is, the backend has to be able to reach the charge point for certain operations. ABL recommends this mode only via mobile networks using M2M SIM cards without access from the Internet or behind VPN solutions.

The local SOAP service endpoint address at the charge point follows the following conventions:

- Address `http://<IP-Address>:<Port>/<BasePath>`
- Example <http://1.2.3.4:7890/ChargePoint>
- The IP address of the charge point is acquired by DHCP or provisioned by the mobile network.
- The port and the base-path may be adjusted using the web administration interface.
- The local SOAP endpoint is deactivated when selecting any Websocket mode.

### 4.2 Supported Profiles

The following table shows the supported OCPP 1.6 Feature Profiles. For details about functions and configuration keys, see the corresponding tables in the following sections.

Profile	Support
Core	yes
Firmware Management	yes
Local Auth List Management	yes

Profile	Support
Reservation	no
Smart Charging	yes
Remote Trigger	yes

### 4.3 Functions

The following table shows the support of the various OCPP functions.

Direction: Charge Point → Central System		
Function	Support	Remarks
Authorize	yes	
BootNotification	yes	
DataTransfer	yes	For details see <a href="#">DataTransfer from CP</a> (see page 35).
DiagnosticsStatusNotification	yes	
FirmwareStatusNotification	yes	
Heartbeat	yes	
MeterValues	yes	
StartTransaction	yes	Meter Value '-1' if meter could not be read.
StatusNotification	yes	
StopTransaction	yes	Meter Value '-1' if meter could not be read.
Direction: Central System → Charge Point		
Function	Support	Remarks

CancelReservation	no	
ChangeAvailability	yes	
ChangeConfiguration	yes	
ClearCache	yes	
ClearChargingProfile	yes	
DataTransfer	yes	For details see <a href="#">DataTransfer from CS</a> (see page 32).
GetCompositeSchedule	yes	
GetConfiguration	yes	
GetDiagnostics	yes	Upload protocols: FTP, HTTP, HTTPS
GetLocalListVersion	yes	
RemoteStartTransaction	yes	
RemoteStopTransaction	yes	
ReserveNow	no	
Reset	yes	
SendLocalList	yes	
SetChargingProfile	yes	ChargingProfilePurpose ChargePointMaxProfile not supported
TriggerMessage	yes	
UnlockConnector	yes	
UpdateFirmware	yes	Download protocols: FTP, HTTP, HTTPS

## 4.4 Configurations

The following sections and tables list the supported configuration keys for OCPP differentiated by protocol version (higher versions include the keys of lower versions). ABL's proprietary keys are listed separately.

### 4.4.1 Standard Keys OCPP 1.5

<b>Standard keys according to OCPP 1.5:</b>				
<b>Key</b>	<b>Support</b>	<b>Required/Optional</b>	<b>Default value</b>	<b>Remarks</b>
HeartBeatInterval	yes	Required	-	The value is not persistent. After a reset of the Charge Point Application, the default value will be used, unless changed by Central System
ConnectionTimeOut	yes	Required	30	Defines maximum time from RemoteStart until connecting a car.  In case the ConnectionTimeOut is greater than 0 a tag can be placed before plugging and if plugging happens then within the configured timeout an accepted tag will start the charging.  In case of 0 for local authorization the car has to be connected before placing a tag in front of the reader.
ResetRetries	no	Required		Reset always performs identical procedure. No need for retries.
BlinkRepeat	no	Optional		not applicable
LightIntensity	no	Optional		not applicable
MeterValueSampleInterval	yes	Required	0	To ensure performance, this value can be set to a minimum of 5. For Eichrecht-compliant installations this value can only be set to a minimum of 60.
ClockAlignedDataInterval	yes	Required	0	
MeterValuesSampledData	yes	Required	Energy.Active.Import.Register	

Standard keys according to OCPP 1.5:				
Key	Support	Required/Optional	Default value	Remarks
MeterValuesAlignedData	yes	Required		
StopTxnSampledData	yes	Required	Energy.Active.Import.Register	
StopTxnAlignedData	yes	Required		
ChargePointId	no			Deprecated as of 1.6 OCPP
ProximityContactRetries	no			Deprecated as of 1.6 OCPP
ProximityLockRetries	no			Deprecated as of 1.6 OCPP

#### 4.4.2 Standard Keys OCPP 1.6

Additional standard keys according to OCPP 1.6:				
Key	Support	Required/Optional	Default value	Remarks
AllowOfflineTxForUnknownId	yes	Optional	false	If the charge point is offline, accepted Ids and Ids which are not yet in the local cache or white list are accepted
AuthorizationCacheEnabled	yes	Optional	True	The local cache is enabled



<b>Additional standard keys according to OCPP 1.6:</b>				
<b>Key</b>	<b>S u p p o r t</b>	<b>Requi red/ Optio nal</b>	<b>Def ault val ue</b>	<b>Remarks</b>
AuthorizeRemoteTxRequests	n	Required	false	Transactions initiated by RemoteStart are not authorized locally
ConnectorPhaseRotation	n	Required		
ConnectorPhaseRotationMaxLength	n	Optional		
GetConfigurationMaxKeys	n	Required		No restriction applies.
LocalAuthListEnabled	y	Required	true	
LocalAuthListMaxLength	n	Required		At least 10,000 entries can be stored.
LocalAuthorizeOffline	y	Required	true	Use local cache and white-list, if offline.
LocalPreAuthorize	y	Required	true	Use local cache and white-list, if online.
MaxEnergyOnInvalidId	n	Optional		
MeterValuesAlignedDataMaxLength	n	Optional		No restriction applies.
MeterValuesSampledDataMaxLength	n	Optional		No restriction applies.

<b>Additional standard keys according to OCPP 1.6:</b>				
<b>Key</b>	<b>S u p p o r t</b>	<b>Requi red/ Optio nal</b>	<b>Def ault val ue</b>	<b>Remarks</b>
MinimumStatusDuration	y e s	Optio nal	0	Status changes are transmitted immediately, by default.
NumberOfConnectors	y e s	Requi red		
SendLocalListMaxLength	n o	Requi red		Up to 9,000 entries can be processed within a single SendLocalList.req
StopTransactionOnEVSidDisconnect	n o	Requi red	true	Transactions are always stopped if the cable is unplugged by the customer.
StopTransactionOnInvalidId	y e s	Requi red	fals e	Whether the charge point will end an ongoing transaction when it receives a status other than Accepted for the <i>UserId</i> in StartTransaction.conf.
StopTxnAlignedDataMaxLength	n o	Optio nal		No restriction applies
StopTxnSampledDataMaxLength	n o	Optio nal		No restriction applies
SupportedFeatureProfiles	n o	Requi red		Supported profiles: Core Profile, Firmware Management, Local List Management
SupportedFeatureProfilesMaxLength	n o	Optio nal		No restriction applies
TransactionMessageAttempts	n o	Requi red		As long as no reboot happens, all messages are saved by the charge point, such that all messages are re-sent if the connection is up again. For behavior after reboot, see <a href="#">Restart Behaviour</a> (see page 7).

**Additional standard keys according to OCPP 1.6:**

Key	Support	Required/Optional	Default value	Remarks
TransactionMessageRetryInterval	n	Required		see above
UnlockConnectorOnEVSideDisconnect	n	Required	true	As soon as the EV is unplugged, no further locking is possible
WebSocketPingInterval	yes	Optional	30	
ReserveConnectorZeroSupported	n	Optional		
ChargeProfileMaxStackLevel	n	Required		
ChargingScheduleAllowedChargingRateUnit	n	Required		
ChargingScheduleMaxPeriods	n	Required		
ChargingScheduleMaxPeriods	n	Required		
ConnectorSwitch3to1PhaseSupported	n	Optional		
MaxChargingProfilesInstalled	n	Required		

### 4.4.3 ABL Proprietary Keys

<b>Proprietary extensions by ABL:</b>			
<b>Key</b>	<b>Read / Write</b>	<b>Default value</b>	<b>Remarks</b>
Access PointName	R/W		Allows setting the APN.
Access PointUser	R/W		User name for authentication at the Access Point.
Access PointPassword	R/W		Password for authentication at the Access Point.
ChargeBoxId	R/W	ABL_<SBC3-serial-number>	Allows changing the charge box ID.
GSMForceReconnect	R/W	true	While true, improves stability to the modem. Modem tries to reconnect periodically every 24h.
DisableDowngrading	R/W	true	Prevent downgrading of the SBC software. Set to false if a downgrade is intended.
EndSignatureType	R/W	SIGNATURE_CDR	Defines the type of end-signature for a meterValue. This is applicable only for Eichrecht compliant Charge Points. If set to "SIGNATURE_TRANSACTION" contains only the last meterValue. If set to "SIGNATURE_CDR" contains the start and end meterValue. if set to "SIGNATURE_FISCAL" contains meterValue outside of a transaction.
FreeCharging	R/W	false	Allow charging without authorization. This will start charging sessions immediately when a car is connected.

Proprietary extensions by ABL:			
Key	Read / Write	Default value	Remarks
FreeChargingOffline	R/W	false	If the charging station is off-line, no authentication is required and charging starts immediately.
FreeChargingUid	R/W	“00000000000000”	The Uid used for an unknown user. This value should be a 4 or 7 byte hex-String.
HandleNewTransaction	R/W	CANCELLATION	Defines the behavior after a power failure and an unknown charging EV (see <a href="#">Restart Behaviour(see page 7)</a> ).
HandleOldTransaction	R/W	CANCELLATION	Defines the behavior after a power failure and a charging EV with information about a previous active charging session (see <a href="#">Restart Behaviour(see page 7)</a> ).
HandleExpiredTransaction	R/W	CANCELLATION	Defines the behavior after a power failure (after the PowerTimeout is expired) and a charging EV with information about a previous active charging session (see <a href="#">Restart Behaviour(see page 7)</a> ).
LateOccupied	R/W	false	If set to true: Connector will be reported as occupied only as of start of charge. Before, available will be reported, even if a car is connected to the station. If set to false: Standard behavior: Occupied as soon as car is plugged in.
LogLevel	R/W	DEBUG	Controls the log verbosity. Can be set to TRACE for more fine grained log file information.
OcppVersion	R/W	1.5	The default version of OCPP. Supported versions: 1.5 and 1.6
PowerTimeout	R/W	0	The time in seconds until an old charging session expires (see <a href="#">Restart Behaviour(see page 7)</a> ).

<b>Proprietary extensions by ABL:</b>			
<b>Key</b>	<b>Re ad / Wr ite</b>	<b>Default value</b>	<b>Remarks</b>
PushMe terConf iguratio n	R/ W	false	If set to true every meter public key will be sent to the backend by DataTransfer just after BootNotification.
Service URL	R/ W	R/W	Allows changing the central system endpoint address.
Securit yProtoc ols	R/ W	R/W	This is a comma separated list of the activated TLS/SSL versions. It prevents downgrades of the connection protocol.
Shorten UIDs	R/ W	false	Select the UID format. Setting this key to true configures the CP to send four byte ISO 14443 UID as-is, with no zero-padding to seven bytes.
Transm itMeter Signatu re	Eic hr ec ht: R/ W  No nEi ch rec ht: R	Eichrech t: true  nonEich recht: false	Only products which are conformant with Eichrecht will transmit signatures in MeterValue objects. Products which are not conformant won't transmit a signature, even if this configuration is set to true. Notes: 1) In Eichrecht compliant boxes, this key can be set to false. In that case, meterValues sent to the Central System will not contain signatures, but still signatures will be collected and saved in the Eichrecht database. 2) In non Eichrecht boxes, this key is not allowed to change value. Central System will get a response with message "REJECTED" if it tries to change it.
MeterV aluesSi gnature Context s	R/ W	Transact ion.Begi n,Transa ction.En d	A comma separated list containing ReadingContext (OCPP1.6 Ch. 7.35) values. This list defines which of the MeterValue objects will have a signature, when sending the MeterValue to the backend.
StopTx nSignat ureCon texts	R/ W	Transact ion.Begi n,Transa ction.En d	A comma separated list containing ReadingContext (OCPP1.6 Ch. 7.35) values. This list defines which of the MeterValue objects will have a signature in the StopTransaction message, in the transactionData list.

Proprietary extensions by ABL:			
Key	Read / Write	Default value	Remarks
StopTxnSampledContexts	R/W	Transaction.Begin,Transaction.End	<p>A comma separated list containing ReadingContext (OCPP1.6 Ch. 7.35) values. This list defines which of the MeterValue objects will be included in the StopTransaction message, in the transactionData list. This list takes precedence over the StopTxnSampledData list.</p> <p>If a needed measurand defined in the StopTxnSampledData, is not part of a Metervalue object whose ReadingContext is included in the StopTxnSampledContexts list, that MeterValue will not be included in the StopTransaction message.</p>
EnableAR4100Meter	R/W	false	A boolean parameter that enables (true) or disables (false), the reading of meter values from the AR4100 device
AR4100PollingInterval	R/W	60	An Integer parameter that defines every how many seconds a meter reading will be performed from the AR4100 device. The range of accepted integer values is [5, 900] in seconds.
AR4100MeterMode	R/W	VDE AR-N 4100	<p>VDE AR-N 4100: 0%, 30%, 60%, 100% of maximum charging current analogue to the resistance applied.</p> <p>BK6-2-300 (\$14a): 4,2kW or the allowed sum if more than one charging point.</p> <p>(Note: option available from SW 2.1p1)</p>
EichrechtCompliant	R		True for Eichrecht boxes, false otherwise
RequestOwnerPasswords	R		Provides password for web administrator

## 4.5 Error Codes

The following table lists supported OCPP error codes as they appear in *StatusNotification.req* when sent by the SBC charge point software.

The OCPP field *vendorErrorCode* consists of a device-type followed by a space and the actual error code:

`vendorErrorCode: <device-type> <error-code>`

The OCPP field info consists of a logical ID (that is an internal address assigned to the device) and an explanatory text to help identify the error:

info: <logical-id>: <text>

<b>OCPP field errorCode</b> <b>Description according to OCPP</b>	<b>OCPP field vendorErrorCode</b>	<b>OCPP field info</b>	<b>Possible reasons and proposed resolutions</b>
ConnectorLockFailure <i>Failure to lock or unlock connector.</i>	EVSE F5	Socket of outlet could not be locked.	Mechanical error, plugged incorrectly or locking actor defect.  1. Re-plug EV 2. OCPP UnlockConnector 3. Reboot
GroundFailure <i>Ground fault circuit interrupter has been activated.</i>	EVSE F3	DC residual current detected or self test of RCD-MD failed.	1. Re-plug EV 2. EV may have a fault.
	RCCB TRIPPED	RCCB breaker tripped.	At site: Check installation and reset RCCB.
HighTemperature <i>Temperature inside charge point is too high.</i>	EVSE F10	Internal temperature of outlet over 80°C or NTC failure.	1. Charging process will be stopped. Will be resolved when temperature drops below 60°C for at least 10 minutes. Check at site why over-temperature happens.  2. For extreme temperatures will stay until power-cycle.
	EVSE F17	Internal temperature of outlet increased (60°C-80°C).	Charging will continue at reduced rate of 6A.
InternalError <i>Error in internal hard- or software component.</i>		currently not in use	



OCPP field <i>errorCode</i> Description according to OCPP	OCPP field <i>vendorErrorCode</i>	OCPP field <i>info</i>	Possible reasons and proposed resolutions
LocalListConflict <i>The authorization information received from the Central System is in conflict with the LocalAuthorizationList.</i>		currently not in use	
Mode3Error/EVCommunicationError <i>Problem with Mode 3 connection to vehicle.</i>	EVSE F6	Outlet with socket: No valid coding-resistor at CS detected; rated current of cable cannot be read.	<ol style="list-style-type: none"> <li>1. Re-plug EV.</li> <li>2. EV has fault.</li> <li>3. Cable is faulty.</li> </ol>
	EVSE F7	Vehicle requests charging with external ventilation; state D not supported.	The obsolete ISO state D is not supported by ABL equipment.
	EVSE F8	Voltage of CP out of limit.	<ol style="list-style-type: none"> <li>1. Re-plug EV.</li> <li>2. EV has fault.</li> <li>3. Cable is faulty.</li> </ol>
NoError <i>No error to report.</i>	Start-up	Start-up	<p>No action to be taken.</p> <p>This is a normal initialization state during startup of the station. May last up to 30s.</p>
	EVSE INIT	Initializing outlet.	<p>No action to be taken.</p> <p>This is a normal initialization state during startup of the station. May last up to 30s.</p>
OtherError <i>Other type of error. More information in vendorErrorCode.</i>	<type> TIMEOUT	Field-bus communication timeout	<p>One occurrence in six months or for short duration (less than 1 minute) may be ignored. Frequent occurrences usually are symptoms of non-correct/faulty bus wiring.</p> <p>Check bus wiring of control and/or meter bus.</p>
	<type> FAULTED	Field-bus protocol error	

<b>OCPP field <i>errorCode</i></b> <b>Description according to OCPP</b>	<b>OCPP field <i>vendorErrorCode</i></b>	<b>OCPP field <i>info</i></b>	<b>Possible reasons and proposed resolutions</b>
	<type> INCOMPATIBLE	Incompatible firmware version	The firmware of this field-bus device is not supported by the SBC software. Check firmware version and correct it by upgrading.
	<type> MISCONFIGURED	Invalid configuration	The settings or parameter set of this field-bus device are not matching the expectations of the SBC software. Fix by using the correct firmware or update the SBC software to a more recent version.
	<type> NOT_PRESENT	Device not present	This field-bus device could not be detected on the bus.  1. Check product configuration for right model/revision of the enclosing product.  2. Check bus cabling. If this occurs for all devices in a product the busses may have been swapped by accident.
	EVSE F2	Invalid condition detected by EVCC self test.	1. Reboot. 2. Check bus wiring. 3. Check EVCC for hardware failures.
	EVSE F4 / EVSE F14	Field-bus communication timeout of SBC detected by outlet.	Check bus wiring.  F14 only: Charging will continue at reduced rate of 6A.
	SPD TRIPPED	Surge protection device triggered.	Lightning strike may have occurred. Check installation at site. Replace surge protection.

<b>OCPP field <i>errorCode</i></b> <b>Description according to OCPP</b>	<b>OCPP field <i>vendorErrorCode</i></b>	<b>OCPP field <i>info</i></b>	<b>Possible reasons and proposed resolutions</b>
	METER NOT_SMART	Meter is not suitable for signatures.	1. Check that LGW is built into product and wired between meter and SBC. 2. Check configuration of LGW for correctness.
	SMGW UPDATE_RUNNING	Device is performing an update.	The LGW is updated. This state vanishes after the update is finished. Do NOT reboot.
	GeneralBreaker TRIPPED	Circuit breaker or RCCB tripped.	See descriptions for RCCB and circuit breaker.
	SMGW DB_FULL	LGW database is full.	The LGW storage capacity for transactions is exhausted.  Archive the currently built-it LGW and replace it by a new one.
<b>OverCurrentFailure</b> <i>Over current protection device has tripped.</i>	EVSE F9	Charging current of at least one phase exceeds programmed limit.	1. Re-plug EV. 2. EV has fault.
	EVSE F15	Load imbalance detected.	Charging will continue at reduced rate of 20A.
	EVSE F16	Communication with overcurrent detection failed.	Charging will continue at reduced rate of 10A.  Check EVCC if this error recurs.
	MCB_32 TRIPPED	Circuit breaker tripped.	1. Check reason of trigger. 2. Reset breaker.
<b>OverVoltage</b> <i>Voltage has risen above an acceptable level.</i>		currently not in use	

<b>OCPP field errorCode</b> <b>Description according to OCPP</b>	<b>OCPP field vendorErrorCode</b>	<b>OCPP field info</b>	<b>Possible reasons and proposed resolutions</b>
PowerMeterFailure <i>Failure to read power meter.</i>	METER NOT_SMART	Meter not suitable for signatures.	Check product configuration for right model/revision of the enclosing product.
	METER TIMEOUT	Field-bus communication timeout.	One occurrence in six months or for short duration (less than 1 minute) may be ignored. Frequent occurrences usually are symptoms of non-correct/faulty bus wiring.  1. Check bus wiring of meter bus. 2. Replace meter.
	METER FAULTED	Field-bus protocol error.	
	METER INCOMPATIBLE	Incompatible firmware version.	The firmware of this meter device is not supported by the SBC software.  1. Check and correct application profile of meter. 2. Upgrade SBC software.
	METER MISCONFIGURED	Invalid configuration.	The settings of this meter are not matching the expectations of the SBC software. Update the SBC software to a more recent version.

<b>OCPP field errorCode</b> <b>Description according to OCPP</b>	<b>OCPP field vendorErrorCode</b>	<b>OCPP field info</b>	<b>Possible reasons and proposed resolutions</b>
	METER NOT_PRESENT	Device not present.	<p>This field-bus device could not be detected on the bus.</p> <ol style="list-style-type: none"> <li>1. Check product configuration for right model/revision of the enclosing product.</li> <li>2. Check bus cabling. If this occurs for all devices in a product the busses may have been swapped by accident.</li> </ol>
<b>PowerSwitchFailure</b> <i>Failure to control power switch.</i>	EVSE F1	Unintended closed main contactor (welding)	<ol style="list-style-type: none"> <li>1. Check main contactor.</li> <li>2. Check auxiliary switch of main contactor.</li> </ol>
	EVSE F11	Main contactor does not close.	
<b>ReaderFailure</b> <i>Failure with ID tag reader.</i>	AUTHENTICATOR TIMEOUT	Field-bus communication timeout.	<p>One occurrence in six months or for short duration (less than 1 minute) may be ignored. Frequent occurrences usually are symptoms of non-correct/faulty bus wiring.</p> <p>Check bus wiring of control bus.</p>
	AUTHENTICATOR FAULTED	Field-bus protocol error.	
	AUTHENTICATOR INCOMPATIBLE	Incompatible firmware version.	<p>The firmware of this RFID reader is not supported by the SBC software. Check firmware version and correct it by upgrading.</p>
	AUTHENTICATOR MISCONFIGURED	Invalid configuration.	<p>The settings or parameter set of this RFID reader are not matching the expectations of the SBC software. Fix by using the correct firmware or update the SBC software to a more recent version.</p>

<b>OCPP field <i>errorCode</i></b>  <b>Description according to OCPP</b>	<b>OCPP field <i>vendorErrorCode</i></b>	<b>OCPP field <i>info</i></b>	<b>Possible reasons and proposed resolutions</b>
	AUTHENTICATOR NOT_PRESENT	Device not present.	This RFID reader could not be detected on the bus.  1. Check product configuration for right model/revision of the enclosing product.  2. Check bus cabling. If this occurs for all devices in a product the busses may have been swapped by accident.
ResetFailure  <i>Unable to perform a reset.</i>		currently not in use	
UnderVoltage  <i>Voltage has dropped below an acceptable level.</i>		currently not in use	
WeakSignal  <i>Wireless communication device reports a weak signal.</i>		currently not in use	

## 4.6 Websocket-Secure Connectivity

Using the Websocket-Secure protocol (wss://) supports transport layer security (TLS) to protect the connection from eavesdropping. In addition to server certificates, client certificates of the station may be used to verify mutual authenticity of the peers. This provides an effective protection against man-in-the-middle attacks.

Standard Basic-Authentication according to OCPP is also supported. Using Basic-Authentication without TLS is strongly discouraged.

The station's client will send Server Name Indication (SNI) in the TLS handshake. SNI is an extension for the TLS by which a client specifies the hostname which it tries to contact. Therefore, the host name must be a fully qualified domain name (FQDN), that is: The backend hostname part must contain a dot '.' and it must not be a plain IPv4 or IPv6 address.

## 4.7 Upload Diagnostics

The backend is able to request the charging station to create and upload a diagnosis file to a given URI. This functionality is defined in both OCPP 1.5 and 1.6 specifications. The URI tells about the protocol and the place for the upload file. The charge point supports the following protocols:

- FTP
- HTTP
- HTTPS

The File Transfer Protocol (FTP) is the standard protocol for the transfer of the diagnostics file from the charge station to the backend. FTP has the following form for a URI:

```
ftp://[user[:password]@]host[:port]/url-path
```

Where:

- *ftp* is the protocol name;
- *user*, *password* are optional information login in;
- *host* is the server hostname or address;
- *port* is an optional sub-component for addressing a port (FTP standard port: 21);
- *url-path* is a directory on the remote server where the diagnostics file shall be saved.

Examples:

- <ftp://userftp:secret@server-ftp.com:2112/upload-directory>
- <ftp://server-ftp.com/upload-directory>

The HTTPS and HTTP protocols use the multipart format with the “POST” method.

An example of the transferred data:

1	--16a9b8647642
2	Content-Disposition: form-data; name="binaryFile"; filename="uploaded-file.tar.gz"
3	Content-Type: application/octet-stream
4	Content-Transfer-Encoding: binary
5	
6	<Binary content of the diagnostic file>
7	--16a9b8647642--

According to both OCPP specifications, the backend has the ability to define the keys below, for configuring the GetDiagnostics request:

key	Field Type	Description
location	anyURI	Mandatory. The URI location where the diagnostics file will be uploaded to.
retries	integer	Optional. 0 means no retries, but a value greater than 0 means how many times the Charge Box will try to upload the diagnostics file.
retryInterval	integer	Optional. The interval after which a retry can take place. 0 means no wait time, and the absence of the key/value pair, means that the ChargeBox can decide how long to wait between attempts.

key	Field Type	Description
startTime	dateTime	Optional. This contains the date and time of the oldest logging information to include in the diagnostics.
stopTime	dateTime	Optional. This contains the date and time of the latest logging information to include in the diagnostics.

If no startTime and stopTime are defined, Charge Box will collect all available logs from the beginning until the time that the GetDiagnostics request was triggered. For more information, see Chapter 5.7 Get Diagnostics in OCPP 1.5 specification, and Chapter 5.9 in OCPP 1.6 specification.

## 4.8 Proprietary use of OCPP DataTransfer

Proprietary requests via *DataTransfer* are supported.

### 4.8.1 Initiated by Central System

When the central system initiates a *DataTransfer*, the CP reacts as defined below.

v e n d o r I d	messag eId	data	Response	Remarks
A B L	DeleteT ransacti onCach e	-	ACCEPTED or REJECTED	Deletes old saved transactions. Perform a reboot afterwards. For details see <a href="#">Restart Behaviour</a> (see page 7).
A B L	GetMete rPublic Key	connectorId [int] example: "1"	status: ACCEPTED or REJECTED  in 1.8 and 1.8p1: data: { "connectorId": "1", "meterPublicKe y": "key" }  pre 1.8 and as of 1.8p2: meter public key as plain value	The public key is transmitted in hexadecimal format.  The format was changed to JSON by accident. This change has been reverted to the original form as of 1.8p2.



<b>v e n d o r l d</b>	<b>messag el d</b>	<b>data</b>	<b>Response</b>	<b>Remarks</b>
A B L	<i>GetOld MeterSi gnature</i>	ConnectorId [int], SignatureType[SmartMet erSignatureType], signatureNumber[int]  example: "1,TRANSACTION,23"  SignatureTypes: CDR, TRANSACTION, FISCAL	Status: <i>ACCEPTED</i> or <i>REJECTED</i>  data: { "connectorId": "1", "signatureType": "TRANSACTION", "signatureNumber": "23", "oldSignature": "123" }	The signature is transmitted in hexadecimal format.
A B L	<i>GetAvail ableSm gwVersi ons</i>	-	Status <i>ACCEPTED</i> or <i>REJECTED</i>  data: ["er1.8", "1.9d163"]	In case of <i>REJECTED</i> , the response will also include additional information as to what went wrong.  Array of available versions newer than the current used one. If there are no newer versions, an empty array [] is returned.
A B L	<i>GetCurr entSmg wVersio n</i>	-	Status <i>ACCEPTED</i> or <i>REJECTED</i>  data: "1.9d162"	In case of <i>REJECTED</i> , the response will also include additional information as to what went wrong.
A B L	<i>Upgrad eSmgw Version</i>	firmwareVersion[String, cardinality 1..1]  example: "er1.10"	Status <i>ACCEPTED</i> or <i>REJECTED</i>	In case of <i>REJECTED</i> , the response will also include additional information as to what went wrong.  Use the 'GetAvailableSmgwVersions' to find out if there are versions available for update or not.

<i>v e n d o r l d</i>	<i>messag eld</i>	<i>data</i>	<b>Response</b>	<b>Remarks</b>
A B L	<i>EnableR fid</i>	connectorId[int, cardinality 1..1], duration[int, cardinality 0..1]  example 1: 1,40 → Enable RFID reader for connectorId=1 for 40 seconds  example 2: 2 → Enable RFID reader for connectorId=2	Status <i>ACCEPTED</i> or <i>REJECTED</i>	<b>(Deprecated, to be removed in next software version)</b> In case of <i>REJECTED</i> , the response will also include additional information as to what went wrong.  both connectorId and duration are integers. Also, duration is in seconds.  If duration is not defined, the default value of 10 seconds is used. The maximum duration that can be defined is 300 seconds (5 minutes), and the lowest is 10 seconds.

#### 4.8.1.1 Rejected status messages

<b>Status message</b>	<b>Meaning</b>	<b>Operation Specific</b>
<b>INVALID_ER_VERSION</b>	Provided Eichrecht version is not valid. The version is wrongly spelled	<i>UpgradeSmgwVersion</i>
<b>UNKWOWN_ER_VERSION</b>	Current Eichrecht version could not be determined. The current version for Eichrecht could not be read successfully. <b>System Error</b>	<i>GetCurrentSmgwVersion, GetAvailableSmgwVersions, UpgradeSmgwVersion</i>
<b>PATH_NOT_FOUND</b>	Path to Eichrecht versions could not be found. <b>System Error</b>	<i>GetAvailableSmgwVersions, GetCurrentSmgwVersion, UpgradeSmgwVersion</i>
<b>INVALID_CONNECTOR_ID</b>	The provided connectorID is not valid. It must be an integer value	<i>EnableRfid (Deprecated, to be removed in next software version)</i>
<b>INVALID_DURATION</b>	The provided duration is not a valid integer	<i>EnableRfid (Deprecated, to be removed in next software version)</i>

Status message	Meaning	Operation Specific
<b>EXCEED_DURATION_LIMIT</b>	The provided duration is not within limits [10, 300] in seconds	<i>EnableRfid (<b>Deprecated</b>, to be removed in next software version)</i>
<b>UNMATCHED_CONNECTOR_ID</b>	No valid connectorID for RFID requested: No charge point available for this ID. Either wrong request data or <b>System Error</b> .	<i>EnableRfid (<b>Deprecated</b>, to be removed in next software version)</i>
<b>RFID_DEVICE_NOT_FOUND</b>	Rfid reader device was not found but the feature is enabled. <b>System Error</b>	<i>EnableRfid (<b>Deprecated</b>, to be removed in next software version)</i>
<b>INVALID_REQUEST_PARAMETERS</b>	The data received in the request are not valid for the specific operation	<i>GetAvailableSmgwVersions, GetCurrentSmgwVersion, UpgradeSmgwVersion, EnableRfid</i>
<b>MISSING_CONNECTOR_ID</b>	Missing request data: Need a valid connector ID in the received data	<i>GetAvailableSmgwVersions, GetCurrentSmgwVersion, UpgradeSmgwVersion, EnableRfid</i>
<b>DEVICE_NOT_FOUND</b>	No Eichrecht device could be found. <b>System Error</b>	<i>GetAvailableSmgwVersions, GetCurrentSmgwVersion, UpgradeSmgwVersion, EnableRfid</i>
<b>UNSUPPORTED_FEATURE</b>	Feature is not supported. It is disabled in the current configuration	<i>GetAvailableSmgwVersions, GetCurrentSmgwVersion, UpgradeSmgwVersion, EnableRfid</i>

## 4.8.2 Initiated by Charge Point

In case CP has to send data to the CS it will also use DataTransfer

<b>vendorId</b>	<b>messageId</b>	<b>data</b>	<b>Response</b>	<b>Remarks</b>
ABL	<i>SetMeterConfiguration</i>	see remark example: {"meters": [{"connectorId": "1", "type": "SIGNATURE", "meterSerial": "1", "publicKey": "123456789"}]}	Status: ACCEPTED or REJECTED	List of meterPublicKeys is transmitted in JSON format to the central system.  Conforms to <a href="https://has-to-be.com/de/development-resources/transparenzsoftware/ocpp-integration/">https://has-to-be.com/de/development-resources/transparenzsoftware/ocpp-integration/</a> , note that vendor ID is "ABL"

## 5 External Setting of Current Limits

Charge Point supports setting current limits on individual charge points of installations. Limits can be configured using multiple ways:

- OCPP Data Transfer and Smart Charging
- Push approach to an HTTP API provided by the Charge Point software
- Web-Pull, in which the Charge Point software reads the limit from an external URL

Limits are implemented as virtual devices inserted into the stations internal model. They shall be referred to as *virtual dynamic limits*. In addition, it is possible to set current limits of single outlets directly with the HTTP API or through OCPP. Since an outlet is a real device with different characteristics than virtual devices, its dynamic current limit will be denoted as *outlet's dynamic limit*.

**Note:** In order to be able to dynamically change current limits, there have to be adjustments performed in the “Products” page of Web administration interface using the installer role. First edit the limit to be influenced, and set it to the appropriate control type. Save and edit again, now fill in the parameters. Save once more and now regenerate the device tree. For more details, consult the Technical Setup Manual.

### 5.1 OCPP Smart Charging

Charging profiles are configured using the *SetChargingProfile* OCPP command. OCPP defines three different possible profiles.

ChargingProfileKind	Remarks
TxDefaultProfile	Can be set for all connectors (connector=0) or individual connectors
TxProfile	Can be set for any individual conenctor
ChargePointMaxProfile	Not supported

The command *GetCompositeSchedule* reports the *ChargingSchedule* for a specified duration, beginning at the current system time.

To remove a charging profile, use the *ClearChargingProfile* request. If a charging session is active and a *ClearChargingProfile* request arrives at the charge point, the current valid charging profile will be recalculated.

### 5.2 Standard Properties of all Virtual Dynamic Limits

The basic properties of all limits (API limit, OCPP limit or Web-Pull limit) are shown on the “Products” page of Web administration interface. The “Diagnosis” page lists the current limit configuration and time since the last update.

Property	Unit	Example	Remark
<i>Minimum</i> <i>Maximum</i>	Amperes	32	External settings can not set the limit below <i>Minimum</i> or above <i>Maximum</i> .
<i>Start value</i>	Amperes	7	Initial value of the limit after a reboot.

Property	Unit	Example	Remark
<i>Time limit</i>	seconds	100 0 for infinity	Amount of time in seconds, after which the system returns to a fallback value (see below), if the external controller does not refresh the setting. This is to ensure that the external controller is working properly. If the external controller crashes, the charge point falls back to a safety mode which only allows very low currents.
<i>Fallback value</i>	seconds	100 0 for infinity	The limit to fall back to if no updates have been received within in the <i>Time limit</i> .

## 5.3 Limit Control via OCPP Data Transfer

To update OCPP limits, the OCPP function *DataTransfer* can be utilized.

**Note:** In order to use this function, first a limit of type *OCPP* has to be defined, see [note above](#)(see page 37).

### 5.3.1 Get Virtual Device Limit

The central system sends the following *DataTransfer* to check the current OCPP limit:

- Vendor-ID: ABL
- Message-ID: GetLimit
- Data: logical-Id of the OCPP-limit device in the syntax *logicalid=value*
  - the logical-Id of a device can be found on the diagnosis page of WebAdmin
  - example: for the device with logical-id *SupplyLimit* enter into the data field:  
*logicalid=SupplyLimit*

Charge Point replies with ACCEPTED and the current limit in Amperes or REJECTED and one of the following error messages in the data field:

- *ACCESS\_DENIED*: The device identified by logical-Id is not an OCPP-limit
- *WRONG\_TYPE\_OF\_DEVICE*: The device identified by logical-Id is not a limit at all.

### 5.3.2 Set Virtual Device Limit

The central system sends the following *DataTransfer* to set an OCPP limit:

- Vendor-ID: ABL
- Message-ID: SetLimit
- Data:
  - logical-Id of the OCPP limit device in the syntax *logicalid=value*  
the logical-Id of a device can be found on the diagnosis page of WebAdmin
  - value in Amperes as float (without unit, e.g. 20.5), in the syntax *value=value*  
this value has to be between the minimum and the maximum allowed value (including minimum and maximum value)
  - example for a device with logical-ID *1/ProductLimit* and the value set to 25A:  
*logicalid=1/ProductLimit;value=25*

Charge Point will answer with ACCEPTED or REJECTED and return one of the following codes to the OCPP backend as data:

- *VALUE\_OUT\_OF\_RANGE*: The value is out of the allowed range.
- *CONVERSION\_ERROR*: The value to be set cannot be converted to a float.

### 5.3.3 Get/Set Outlet Limit

Abovementioned limits are virtual devices associated with installed products. The main supply can be configured through WebAdmin.

Additionally, it is possible to change the dynamic current limit of an outlet itself by an OCCP call or via Web API. This limit can be between 0 and *the factory setting of the outlet*.

Configuration of this value is identical to the way limits were configured in the previous sections. The commands are *GetOutletLimit* and *SetOutletLimit* instead of *GetLimit* and *SetLimit*.

Assuming the logical Id of the outlet is *1/A/OutletController*, the following *DataTransfer* messages configure the limit:

Get the dynamic limit value of the outlet:

- Message-ID: *GetOutletLimit*
- Data: logical-Id of the outlet device in the syntax *logicalid=value*  
Example: *logicalid=1/A/OutletController*

Set the dynamic limit value of the outlet:

- Message-ID: *SetOutletLimit*
- Data: logical-Id of the outlet device in the syntax *logicalid=value* and the value to be set  
Example with 20A and outlet *evse100*: *logicalid=1/A/OutletController;value=20*
- Reset the dynamic limit value setting by sending -1 as value in OCPP's data field:  
*logicalid=1/A/OutletController;value=-1*

Notes:

- The outlet limit value provided by the Web API is not directly visible in the Web administration interface. Instead, only the resulting overall limitation per outlet is displayed.
- The setting of this value will be reset by a soft- or hard reset of the Charge Point software.

### 5.3.4 General Notes on Setting Limits

- Limit values should not change every few seconds. Doing so leads to some EVs to report an error or refusing to charge.
- Reducing the maximum allowed current is immediately propagated to all EVs currently connected for charging. According to OCPP, EVs have five seconds to adapt their current consumption accordingly.
- Increasing the maximum allowed current will not be propagated to all EVs right away, rather limits get updates every six seconds in a round-robin strategy one-by-one. Example: A setup with six charging EVs will take about 30 seconds to propagate the new limits to all EVs.
- Charge Point software informs the EV of the maximum allowed current consumption. The real current consumption of the EV must not exceed this value, *but it can be lower*.
- If the current consumption of an EV is higher than the allowed current limit for more than five seconds, the EV will be disconnected from the charging point by switching off the contactor. This is a prescribed security measure from the norms.